 


# IN-LINE RUN RING SYSTEM – LEADER



## STEP 1

Splice on your chosen size 8 Evolve swivel.

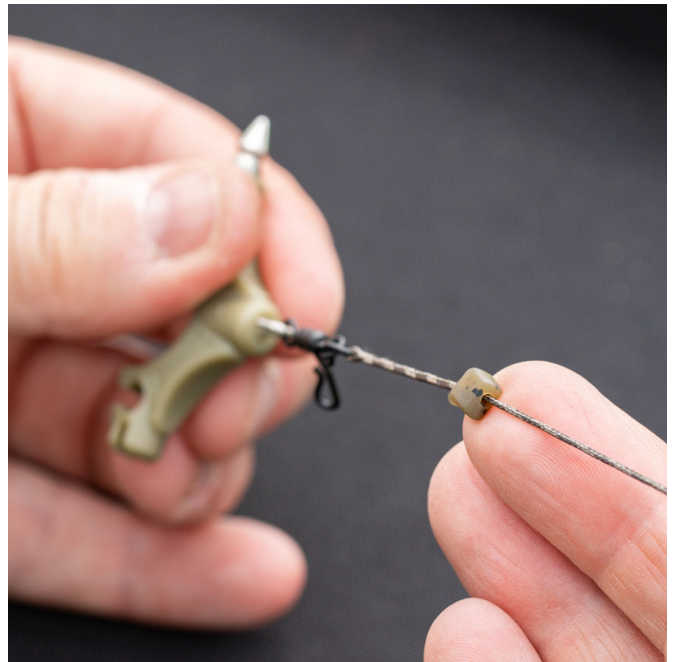


## STEP 2

Using a gated needle, add your bead onto your leader ensuring the larger bore is facing away from the swivel (flared end of bead towards the swivel).



### STEP 3

Add the cap onto your leader by inserting your leader through the cap bore, from front to back.

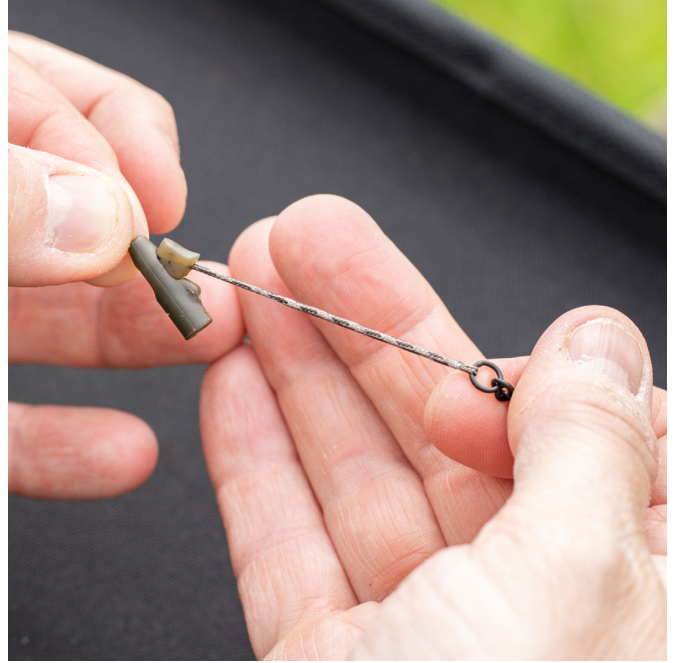

### STEP 4

Moisten the bead and insert it into the cap bore.



### STEP 5

Place the insert into the weight/lead.



### STEP 6

Cut insert to size using the cutting guide on the rear of the cap (position the cap on top of the weight/lead and cut the insert at the line to achieve the perfect length).



## STEP 7

You should have approximately 5mm of threaded insert protruding from the top of your weight/lead.



## STEP 8

Now attach your weight/lead by screwing it into the cap.

Align the cap to the flat side of your weight/lead (ideally to align the weight with the leader groove), and whilst holding the cap in position tighten using the tool supplied.



### STEP 9

Once pinched tight and all is aligned, you are ready to insert your swivel.



### STEP 10

Place your swivel into the inserts "+" or "-" fitting.



### STEP 11

Attach your chosen rig and you are ready to fish!